

Work Order ID 144685

April 21, 2016 4:20:42 PM

144685

Page 1

Item ID: D350-567-141

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Item Name: Floor Window Close Out

Stop ***NS2***

Start Date: 5/13/2016 Start Qty: 1.00

1

Cust Item ID:

Required Date: 5/20/2016 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals: Process Plan: MLS Date: APR 22 2016

Tooling:

Date:

Run Start ***NR1***

QC: _____

Date:

SPC (Y/N): _____

Date:

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
DSI 9590	F	MAY 03 2016	DAS 6 9-89					MLS 16-05-05	
100	Document Control	0.00							
100	DOCUMENT CONTROL								
DC	Memo	0.00							
Doc.Control -USB or Paperwork	Photocopy bluefile & type labels per PPP D350-567-141 CHG004								
110	Pick Kit	0.00							
110									
Packaging	Memo	0.00							
Packaging									
120	QC4- 100% Inspect kits for completeness	0.00							
120									
QC	Memo	0.03							
Quality Control									

DAS
28
9-89

MAY 09 2016

MAY 05 2016

DAS
27
9-89

DAS
28
9-89

MAY 09 2016

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>				Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐																																																	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																																																																		
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																																																																		
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																																																																		
Large Fab ☐	Composite ☐	Supplier ☐																																																																			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval																																																																	
Description Work Order Deviation			Disposition																																																																		
			Completed By																																																																		
			Lead hand / Supervisor Approval Verification																																																																		
			QC / QA Coordinator Approval																																																																		
Root Cause <table style="width: 100%; border: none;"> <tr> <td style="border: none;">Environment ☐</td> <td style="border: none;">No Re-verification ☐</td> </tr> <tr> <td style="border: none;">Design ☐</td> <td style="border: none;">Operator ☐</td> </tr> <tr> <td style="border: none;">Doc/Data ☐</td> <td style="border: none;">Offset/Setup ☐</td> </tr> <tr> <td style="border: none;">Equip/Tooling ☐</td> <td style="border: none;">Supplier ☐</td> </tr> <tr> <td style="border: none;">Handling/Pre ☐</td> <td style="border: none;">Training ☐</td> </tr> <tr> <td style="border: none;">Material ☐</td> <td style="border: none;">Use for Testing ☐</td> </tr> <tr> <td style="border: none;">Internal Transport ☐</td> <td style="border: none;">Poor Information ☐</td> </tr> <tr> <td style="border: none;">Tribal Knowledge ☐</td> <td style="border: none;">Rushing ☐</td> </tr> <tr> <td style="border: none;">LOA ☐</td> <td style="border: none;">Product Improvement ☐</td> </tr> <tr> <td style="border: none;">Substation ☐</td> <td style="border: none;">Process Improvement ☐</td> </tr> <tr> <td style="border: none;">Past Expiry Date ☐</td> <td style="border: none;">Manufacturing Process ☐</td> </tr> <tr> <td style="border: none;">Misidentified ☐</td> <td style="border: none;">Past Due ☐</td> </tr> </table>			Environment ☐	No Re-verification ☐	Design ☐	Operator ☐	Doc/Data ☐	Offset/Setup ☐	Equip/Tooling ☐	Supplier ☐	Handling/Pre ☐	Training ☐	Material ☐	Use for Testing ☐	Internal Transport ☐	Poor Information ☐	Tribal Knowledge ☐	Rushing ☐	LOA ☐	Product Improvement ☐	Substation ☐	Process Improvement ☐	Past Expiry Date ☐	Manufacturing Process ☐	Misidentified ☐	Past Due ☐	FAULT CATEGORY <table style="width: 100%; border: none;"> <tr> <td style="border: none;">Pressure/Forced ☐</td> <td style="border: none;">Temperature/Cure ☐</td> <td style="border: none;">Power Loss/Surge ☐</td> <td style="border: none;">Positioned Wrong ☐</td> </tr> <tr> <td style="border: none;">Bending ☐</td> <td style="border: none;">Set-up ☐</td> <td style="border: none;">Folio/Program ☐</td> <td style="border: none;">Outside Dimensions ☐</td> </tr> <tr> <td style="border: none;">Centre Not Concentric ☐</td> <td style="border: none;">BOM/Route ☐</td> <td style="border: none;">Grain ☐</td> <td style="border: none;">Over/Under tolerance ☐</td> </tr> <tr> <td style="border: none;">Cracks ☐</td> <td style="border: none;">Broken/Damage/Defect ☐</td> <td style="border: none;">Weld ☐</td> <td style="border: none;">Part Incorrect ☐</td> </tr> <tr> <td style="border: none;">Crimp/Kink/Ripple/Wave ☐</td> <td style="border: none;">Inspection Incomplete/Unqualified ☐</td> <td style="border: none;">Wrong Stock Pulled ☐</td> <td style="border: none;">Part Lost/Missing ☐</td> </tr> <tr> <td style="border: none;">Cuffs ☐</td> <td style="border: none;">Contamination ☐</td> <td style="border: none;">Out of Sequence ☐</td> <td style="border: none;">Part Moved ☐</td> </tr> <tr> <td style="border: none;">Crushing ☐</td> <td style="border: none;">Countersink ☐</td> <td style="border: none;">Off-set ☐</td> <td style="border: none;">Drawing ☐</td> </tr> <tr> <td style="border: none;">Heat Treat ☐</td> <td style="border: none;">Cut Too Short ☐</td> <td style="border: none;">Mislabeled ☐</td> <td style="border: none;">Finish ☐</td> </tr> <tr> <td style="border: none;">Wave/Twist in Tube ☐</td> <td style="border: none;">Instructions Incomplete/Unclear ☐</td> <td style="border: none;">Fit/Function ☐</td> <td style="border: none;">Misread ☐</td> </tr> <tr> <td style="border: none;">Marks/Chatter ☐</td> <td style="border: none;">Drill Holes ☐</td> <td style="border: none;">Misaligned/off center ☐</td> <td style="border: none;">Turning Sequence ☐</td> </tr> </table>			Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐
Environment ☐	No Re-verification ☐																																																																				
Design ☐	Operator ☐																																																																				
Doc/Data ☐	Offset/Setup ☐																																																																				
Equip/Tooling ☐	Supplier ☐																																																																				
Handling/Pre ☐	Training ☐																																																																				
Material ☐	Use for Testing ☐																																																																				
Internal Transport ☐	Poor Information ☐																																																																				
Tribal Knowledge ☐	Rushing ☐																																																																				
LOA ☐	Product Improvement ☐																																																																				
Substation ☐	Process Improvement ☐																																																																				
Past Expiry Date ☐	Manufacturing Process ☐																																																																				
Misidentified ☐	Past Due ☐																																																																				
Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐																																																																		
Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐																																																																		
Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐																																																																		
Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐																																																																		
Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐																																																																		
Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐																																																																		
Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐																																																																		
Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐																																																																		
Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐																																																																		
Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐																																																																		
OTHER : ☐																																																																					

Work Order ID 144685

April 21, 2016 4:20:42 PM

144685

Page 2

Item ID: D350-567-141

Accept

N900040100

Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Floor Window Close Out

Start Date: 5/13/2016 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 5/20/2016 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start ***NR1***

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
130	Packaging	0.00							
130									
Packaging	Memo	0.00							
Packaging	Identify and pack for shipping as per PPP D350-567-141 Location:FG033								
140	QC21- Final Inspection - Work Order Release	0.00							
140									
QC	Memo	0.10							
Quality Control									

DAS
28
C 8C
MAY 09 2016

MLS
MAY 10 2016
2m 16/05/09

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____							
Misidentified ☐	Past Due ☐								

Picklist Print

April 21, 2016 4:20:41 PM

Page 1

Work Order ID: 144685

144685

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 5/13/2016

Required Date: 5/20/2016

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV:A 11.11.09 new issue DD verf:JLM IPP REV:B
12.01.23 AS PER ECN12-511 DD VERF:EC IPP REV:C 12.03.05
AS PER ECN12-537 DD VERF:EC IPP REV:D 13.04.01 AS PER
DSI9590 REV.E DD VERF:JLM IPP REV:E AS PER DSI9590 REV F JLM
VERIFIED BY:DD

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D4434-047		Manufactured	No				Each	1.0000		1			DAS 6 27 9-89 9-89
D4434-047									**				
Cover Assembly													
	DAS 28 9-89			<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>							
				ST619	1								
				138349	1								
D3802-1		Manufactured	No			110	f	46.1378	2	2			DAS 6 27 9-89 9-89
D3802-1									**				
Windows Seal (\$ Per Foot)													
	DAS 28 9-89			<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>							
	DAS 38 9-89			ST416	46.13776								
				134091	0.75								
				140492	3								
				141991	5.88776								
				143804	36.5								
D4434-041		Manufactured	No			110	Each	0.0000	1	1			DAS 6 27 9-89 9-89
D4434-041									**				
Fwd Bracket Assembly													
D4435-045		Manufactured	No			110	Each	1.0000	1	1			
D4435-045									**				
T/R Bellcrank Cover Assembly													
	DAS 28 9-89			<u>Location</u>	<u>Loc Qty</u>	<u>Loc Code</u>							
				ST620	1								
				127215	1								

MAY 05 2016

B146145

MAY 05 2016

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																						
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																						
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																						
Large Fab ☐	Composite ☐	Supplier ☐																							
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																		
Description Work Order Deviation				Disposition			Completed By																		
							Lead hand / Supervisor Approval Verification																		
							QC / QA Coordinator Approval																		
Root Cause		FAULT CATEGORY																							
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐		Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐		Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Misabeled ☐ Fit/Function ☐ Misaligned/off center ☐		Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐																	
OTHER : ☐																									

Picklist Print

April 21, 2016 4:20:41 PM

Page 2

Work Order ID: 144685

144685

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 5/13/2016

Required Date: 5/20/2016

Start Qty: 1.00

Required Qty: 1.00

D4435-9 Manufactured No

110 Each 6.0000 2 2

D4435-9

Bracket

DAS
28
9-89

**

DAS
6
27
9-89

Location

Loc Qty

Loc Code

ST098

6

138369

6

2

D4436-041 Manufactured No

110 Each 1.0000 1 1

D4436-041

Aft Bracket Assembly

DAS
28
9-89

**

DAS
6
27
9-89

Location

Loc Qty

Loc Code

ST618

1

140879

1

1

D4441-1 Manufactured No

110 f 437.6130 2 2

D4441-1

Rubber Seal

DAS
38
9-89
DAS
28
9-89

**

DAS
6
27
9-89

Location

Loc Qty

Loc Code

ST422

437.613

120932

437.613

2

AN3-3A Purchased No

110 Each 177.0000 7 7

AN3-3A

Bolt

**

DAS
6
27
9-89

Location

Loc Qty

Loc Code

ST350

177

m134294

33

m134376

44

m134537

100

134657

7

DAS
28
9-89

MAY 05 2016

April 21, 2016 4:20:41 PM

Shop Packet Print

Page 2

DQA: _____ Date: _____

**WORK ORDER NON-CONFORMANCE / UPDATE**

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____							
Misidentified ☐	Past Due ☐								

Picklist Print

April 21, 2016 4:20:41 PM

Page 3

Work Order ID: 144685

144685

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 5/13/2016

Required Date: 5/20/2016

Start Qty: 1.00

Required Qty: 1.00

AN525-10R6

Purchased

No

110

Each

398.0000

2

2

DAS

DAS

27

AN525-10R6

Screw

**

DAS

27

6

9-89

DAS
28
9-89

Location

Loc Qty

Loc Code

ST329

398

M134502

398

2

AN525-832R7

Purchased

No

110

Each

158.0000

2

2

DAS

DAS

27

AN525-832R7

Screw

**

DAS

27

6

9-89

DAS
28
9-89

Location

Loc Qty

Loc Code

GA

75

m134070

75

ST328

83

m131957

8

m134070

75

2

MS21042L06

Purchased

No

110

Each

234.0000

7

7

DAS

DAS

27

MS21042L06

Nut

**

DAS

27

6

9-89

DAS
28
9-89

Location

Loc Qty

Loc Code

ST303

234

m134294

84

m134474

50

m134537

100

7

MAY 05 2016

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>				Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																		
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																		
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																		
Large Fab ☐	Composite ☐	Supplier ☐																			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval																	
Description Work Order Deviation		Disposition		Completed By																	
				Lead hand / Supervisor Approval Verification																	
				QC / QA Coordinator Approval																	
<table style="width: 100%; border: none;"> <tr> <td colspan="2" style="text-align: center; border: none;">Root Cause</td> <td colspan="3" style="text-align: center; border: none;">FAULT CATEGORY</td> </tr> <tr> <td style="border: none; vertical-align: top;"> Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ </td> <td style="border: none; vertical-align: top;"> No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐ </td> <td style="border: none; vertical-align: top;"> Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ </td> <td style="border: none; vertical-align: top;"> Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ </td> <td style="border: none; vertical-align: top;"> Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ </td> <td style="border: none; vertical-align: top;"> Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐ </td> </tr> <tr> <td colspan="4" style="border: none; vertical-align: top;"> OTHER : ☐ </td> </tr> </table>					Root Cause		FAULT CATEGORY			Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐	OTHER : ☐					
Root Cause		FAULT CATEGORY																			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐	Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐	Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐	Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐																
OTHER : ☐																					

Picklist Print

April 21, 2016 4:20:41 PM

Page 4

Work Order ID: 144685

144685

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 5/13/2016

Required Date: 5/20/2016

Start Qty: 1.00

Required Qty: 1.00

MS21042L08

Purchased

No

110

Each

935.0000

2

2

MS21042L08

Nut

DAS 6 27
9-89 9-89

DAS
28
9-89

Location

Loc Qty

Loc Code

CA	101	
m129682	101	
GA	319	
m133134	3	
m134063	316	
ST303	237	
m133922	37	
m134574	200	
ST308	278	
m134376	278	

2

MS21042L3

Purchased

No

110

Each

1,588.000

5

5

MS21042L3

Nut

DAS 6 27
9-89 9-89

Location

Loc Qty

Loc Code

FP001	100	
m133790	100	
GA	782	
m133790	3	
m134360	779	
ST303	706	
m134039	12	
m134360	694	

MAY 05 2016

DAS
28
9-89

April 21, 2016 4:20:41 PM

Shop Packet Print

Page 4

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	
Root Cause				FAULT CATEGORY					
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____							
Misidentified ☐	Past Due ☐								

Picklist Print

April 21, 2016 4:20:41 PM

Page 5

Work Order ID: 144685

144685

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 5/13/2016

Required Date: 5/20/2016

Start Qty: 1.00

Required Qty: 1.00

MS21059L3

Purchased

No

110

Each

179.0000

2

2

MS21059L3

Nut Plate

DAS

DAS

6

9-89

27

9-89

Location

Loc Qty

Loc Code

CA

8

M129682

8

GA

30

M133990

30

ST301

115

M134055

15

M134257

50

M134509

50

ST303

26

M133016

26

DAS
28
9-89

DAS

6

9-89

DAS

27

9-89

MS35206-229

Purchased

No

110

Each

144.0000

7

7

MS35206-229

Screw

DAS
28
9-89

Location

Loc Qty

Loc Code

ST271

144

M134070

144

NAS1149F0332P

Purchased

No

110

Each

1,715.000

12

12

NAS1149F0332P

Washer

DAS

6

9-89

DAS

27

9-89

Location

Loc Qty

Loc Code

GA

312

m133709

312

ST262

1403

m134257

1403

DAS
28
9-89

MAY 05 2016

April 21, 2016 4:20:41 PM

Shop Packet Print

Page 5

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QSI042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY			
Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐	No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐	Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐			
OTHER : ☐					

Picklist Print

April 21, 2016 4:20:42 PM

Page 6

Work Order ID: 144685

144685

Parent Item: D350-567-141

D350-567-141

Parent Item Name: Floor Window Close Out

Start Date: 5/13/2016

Required Date: 5/20/2016

Start Qty: 1.00

Required Qty: 1.00

NAS1149FN616P

Purchased

No

110

Each

80.0000

14

14

NAS1149FN616P

WASHER

DAS
6
9-89
DAS
27
9-89

Location

Loc Qty

Loc Code

ST263

80

M133988

80

NAS1149FN816P

Purchased

No

110

Each

764.0000

2

2

NAS1149FN816P

WASHER

DAS
27
9-89

Location

Loc Qty

Loc Code

ST262

764

117316

764

DAS
6
9-89

DAS
28
9-89

MAY 09 2016

April 21, 2016 4:20:42 PM

Shop Packet Print

Page 6

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____	DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐	AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐			
Date :	Step #:	QTY Effective :		MRB (QS1042) Approval	
Description Work Order Deviation		Disposition		Completed By	
				Lead hand / Supervisor Approval Verification	
				QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY			
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____			
Misidentified ☐	Past Due ☐				

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-567 REV. E OR EARLIER
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-567 REV. 2 OR EARLIER

REF CANADIAN STC: SH92-18

FAA STC: SH989NE

FAA STC: SH990NE

1.0 Purpose

The purpose of this service instruction is to add the D350-567-141/-143/-145 Close-out Kits, which are intended for customers wishing to operate their aircraft with the interior floor window removed. The D350-567-141/-143/-145 Floor Window Close-out Kits provide a barrier around the interior and exterior vertical reference floor window to prevent objects from falling into the aircraft controls when the interior floor window is removed as shown in Figure 1. The -143 Kit is identical to the -141 Kit with the exception of the D4971-041 T/R Bellcrank Cover Assy which replaces the D4435-045 T/R Bellcrank Cover Assy on aircraft fitted with energy attenuating seats. The -145 Kit is similar to the -143 Kit but is only kit compatible with the AS350 B3e aircraft.

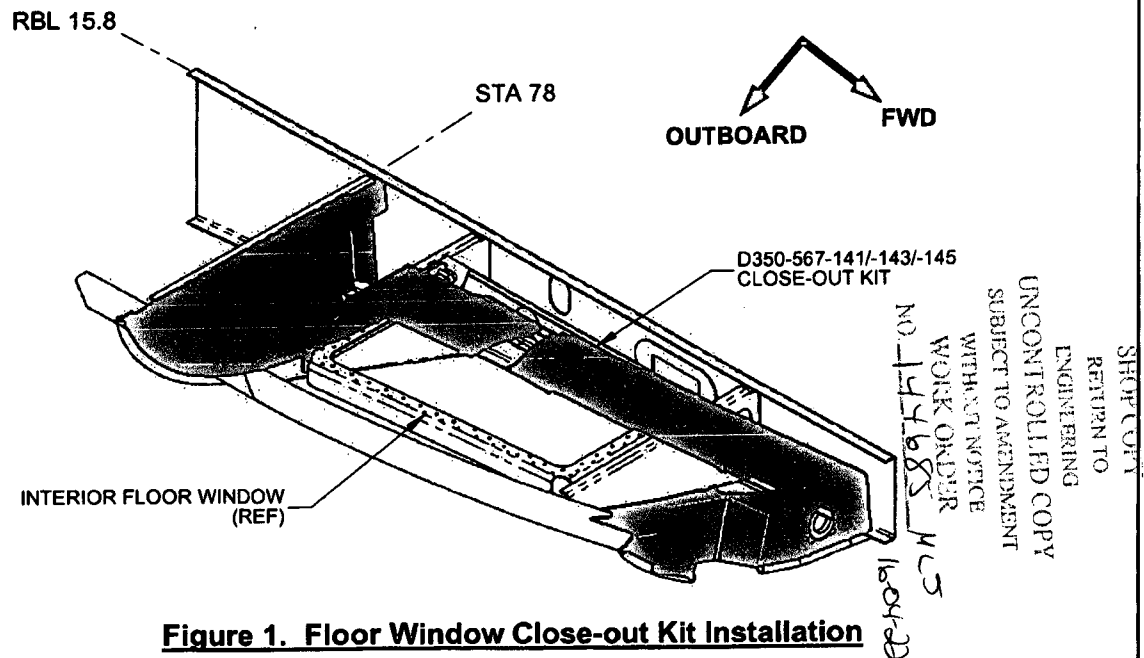


Figure 1. Floor Window Close-out Kit Installation

F	ADDED D4434-047 TO -141 KIT SEE PAR14-372.	AJS	15.01.12
E	ADD -143/-145 KITS	RF	14.03.20
E	CLARIFY FIGURES 3-12	VS	13.09.11
C	CORRECT TYPO NAS1149FN816P WAS NAS1149FN882P	RF	12.03.13
B	MS35206-229 WAS AN525-632R6; NAS1149FN616P (Qty 14) WAS (Qty 9); MS21042L06 (Qty 7) WAS (Qty 9); ADD AN525-832R7, NAS1149FN882P & MS21042L08	RF	12.02.22
A	NEW ISSUE	RF	12.01.09
REV.	DESCRIPTION	BY	DATE
DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 1 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

2.0 Parts List

Qty -141	Qty -143	Qty -145	Part Number	Description
X			D350-567-141	FLOOR WINDOW CLOSE-OUT KIT (REGULAR SEATS)
	X		D350-567-143	FLOOR WINDOW CLOSE-OUT KIT (ENERGY ATTENUATING SEATS)
		X	D350-567-145	FLOOR WINDOW CLOSE-OUT KIT (AS 350 B3e)
1	1	1	D3802-1-024	SEAL (24")
1	1		D4434-041	FWD BRACKET ASSEMBLY
1	1		D4434-047	COVER ASSEMBLY
1			D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	2	2	D4435-9	BRACKET
1	1	1	D4436-041	AFT BRACKET ASSEMBLY
1	1	1	D4441-1-240	RUBBER SEAL (24")
		1	D4730-020-030	VELCRO STRIP
	1	1	D4971-041	T/R BELLCRANK COVER ASSEMBLY
		1	D5076-041	FWD BRACKET ASSEMBLY
7	5	5	AN3-3A	BOLT
2	2	2	AN525-10R6	SCREW
2	2	2	AN525-832R7	SCREW
		1	CB 200	3.5g ACRYLIC ADHESIVE
7	7	7	MS21042L06	NUT (OR MS21042-06)
2	2	2	MS21042L08	NUT (OR MS21042-08)
5	5	5	MS21042L3	NUT (OR MS21042-3)
2	2	2	MS21059L3	NUTPLATE
7	7	7	MS35206-229	SCREW
12	10	10	NAS1149F0332P	WASHER (AN960-10L)
14	14	14	NAS1149FN616P	WASHER (OR AN960-6L)
2	2	2	NAS1149FN816P	WASHER (OR AN960-8L)

3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141/-143/-145 Kits.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141/-143/-145	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kg	1.66 m	2.94 m-kg

4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141/-143/-145 Close-out Kits. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 - D350-567-115 - OK to remove D3295-041
 - D350-567-031 - OK to remove D3212-1
 - D350-567-011 - OK to remove D2214
 - D350-567-021 - OK to remove D2951
- It is acceptable to drill/trim the D350-567-141/-143/-145 Close-out Kits as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

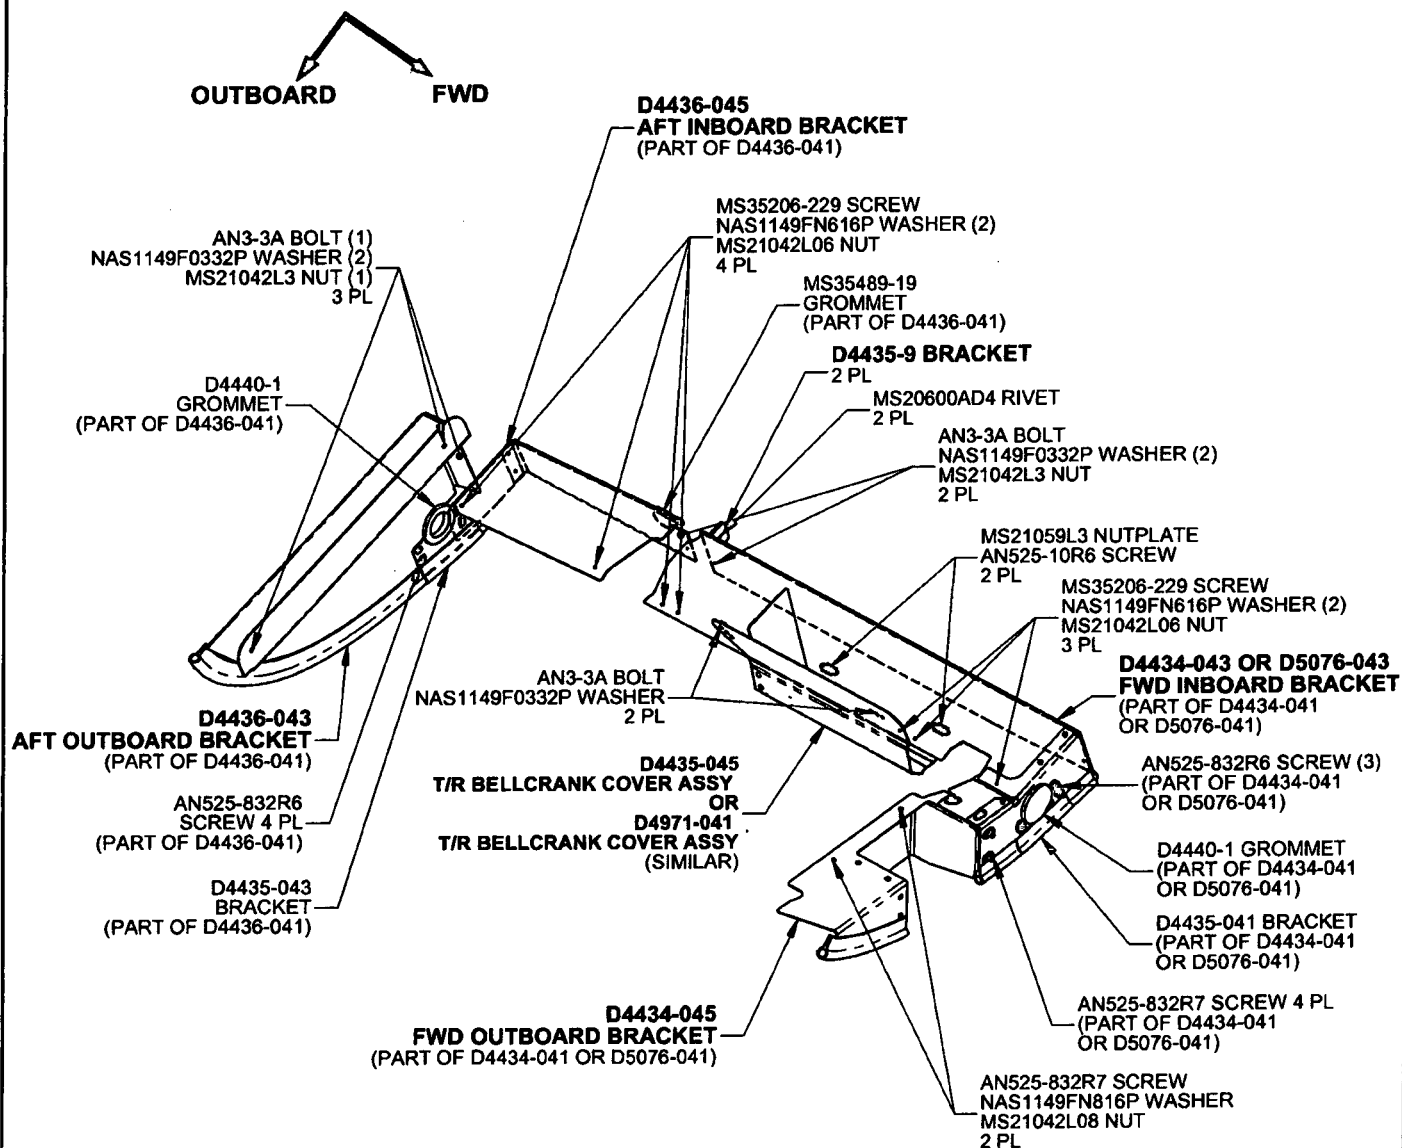


Figure 2. Floor Window Close-out Kit Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *D. Shepherd*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	A/S	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 3 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

4.1 Temporarily install D4436-043 Aft Outboard Bracket and D4436-045 Aft Inboard Bracket using clecos and/or cleco clamps. Before drilling holes:

- a) Position the D4436-043 Aft Outboard Bracket so the flange contacts the main beam as shown in Figure 3.
- b) Confirm that the D4436-043 Aft Outboard Bracket and beam angle are parallel as shown in Figure 4.

4.2 Temporarily install D4434-043/D5076-043 Fwd Inboard Bracket and D4434-045 Fwd Outboard Bracket using clecos and cleco clamps. Confirm there is no contact between D4436-045 Aft Inboard Bracket and D4434-043 /D5076-043 Fwd Inboard Bracket and main beam gusset as shown in Figure 5.

 4.3 For -141 installations, if aircraft is equipped with Collective Circuit Breaker Board box, trim D4434-043 Fwd Inboard Bracket as shown in Figure 14. Note: Confirm the D4434-047 Bracket fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.4 For -143 installations, if aircraft is equipped with Collective Circuit Breaker Board box, trim D4434-043 Fwd Inboard Bracket as shown in Figure 14. Install D4971-041 T/R Bellcrank cover as shown in Figure 13b. Note: Confirm the D4434-047 Bracket fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.5 For -145 installations, if aircraft is equipped with Collective Circuit Breaker Board box, use D5076-043 Fwd Inboard Bracket as shown in Figure 13c. Install D4971-041 T/R Bellcrank cover as shown in Figure 13c. Note: Confirm the D5076-3 Cover fits over the Collective Circuit Breaker Board box. Adjust opening as required.

4.6 Drill out rivets holding plastic wire bundle stand offs. Transfer drill $\varnothing 0.144$ holes to D4436-045 Aft Inboard Bracket per Figure 6. Transfer drill 2 x $\varnothing 0.144$ holes to D4434-043/D5076-043 Fwd Inboard Bracket per Figure 7. Transfer drill 2 x $\varnothing 0.144$ holes for D4434-043/D5076-043 Fwd Inboard Bracket per Figure 8. Before drilling confirm the D4434-043/D5076-043 and D4436-045 brackets are flush with outboard edge of main beam flange. Assemble D4436-045 Aft Inboard Bracket and D4434-043/D5076-043 Fwd Inboard Bracket and wire bundle stand offs to main beam flange using MS35206-229 screw, NAS1149FN616P washer and MS21042L06 nut.

4.7 Install D4436-043 Aft Outboard Bracket using AN3-3A bolt and NAS1149F0332P washer and MS21042L3 nut per Figure 9.

4.8 Remove 2 rivets holding RH heating plastic stand off as shown in Figure 10. Position the D4435-9 Brackets on the in/outboard sides of the cross beam and transfer drill 2 x $\varnothing 0.129$ holes from crossbeam to both D4435-9 Brackets. Install D4435-9 Brackets and RH heating plastic stand off using MS20600AD4 rivets or equivalent.

4.9 Drill a pilot hole from D4435-9 Bracket to the D4434-043/D5076-043 Fwd Inboard Bracket and D4436-045 Aft Inboard Bracket and open to $\varnothing 0.191$. Install AN3-3A bolt, NAS1149F0332P washer and MS21042L3 nut as shown in Figure 10. Be sure to maintain edge distance.

4.10 Transfer drill 2 x $\varnothing 0.144$ holes from crossbeam to D4434-045 Fwd Outboard Bracket if holes exist in crossbeam. If holes do not exist, drill 2 x $\varnothing 0.144$ holes at either end of D4434-045 bracket as shown in Figure 11. Install AN525-832R7 screws, NAS1149FN816P washer and MS21042L08 nuts.


4.11 FOR D350-567-141 KIT

a) Align D4435-045 T/R Bellcrank Cover Assy with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12a.

b) Transfer drill 2 x $\varnothing 0.098$ holes from D4435-045 T/R Bellcrank Cover Assy to D4434-043 Fwd Inboard Bracket. Open holes to $\varnothing 0.191$ and install MS21059L3 nut plate into D4434-043 Fwd Inboard Bracket as shown in Figure 12a and Figure 13a. Install D4435-045 T/R Bellcrank Cover Assy using AN525-10R6 screw, AN3-3A bolt and NAS1149F0332P washer per Figure 12a and Figure 13a.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6


DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 4 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

4.12 FOR D350-567-143/-145 KIT

- a) Remove the D4972-041 Side Plate Assy from the D4971-041 T/R Bellcrank Cover Assy and retain fasteners.
 - b) Align D4971-1 T/R Bellcrank Cover with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12b.
 - c) Bond D4730-020-030 Velcro to back of D4971-1 T/R Bellcrank Cover as shown in Figure 12b using CB 200 adhesive.
 - d) Transfer drill 2 x $\varnothing 0.098$ holes from D4971-1 Cover Plate to D4434-043/D5076-043 Fwd Inboard Bracket. Open holes to $\varnothing 0.191$ and install MS21059L3 nut plate into D4434-043/D5076-043 Fwd Inboard Bracket as shown in Figure 13b/13c. Install D4971-1 Cover Plate using AN525-10R6 screws and D4730-020-030 Velcro per Figure 12b and Figure 13b/13c.
 - e) Re-install the D4972-041 Side Plate Assy using the retained fasteners.
- 4.13 The D4440-1 grommets are provided to facilitate the routing of wiring harness thru the close-out kit as required. The wiring harness should be secure to the aircraft structure per AC 43.13.13-1B or AS350 Chapter 20.02.01.
- 4.14 Use the D3802-1-024 Seal to fill gaps between the brackets and the cowlings that are larger than 0.25 inch.
- 4.15 Perform travel/interference check of the flight controls to ensure there is no interference and all controls still have full travel.
- 4.16 Ensure there is a gap between the components of the D350-567-141/-143/-145 Close-out Kit and the aircraft structure so that the Close-out Kit does not chafe, interfere, or cause damage to the surrounding aircraft structure. In areas where the D350-567-141 /-143/-145 Close-out Kit may contact the aircraft structure, protect from abrasion using chafing tape or a layer Proseal 890 or MIL-S-8802 class B2 sealant or equivalent as required.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 5 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

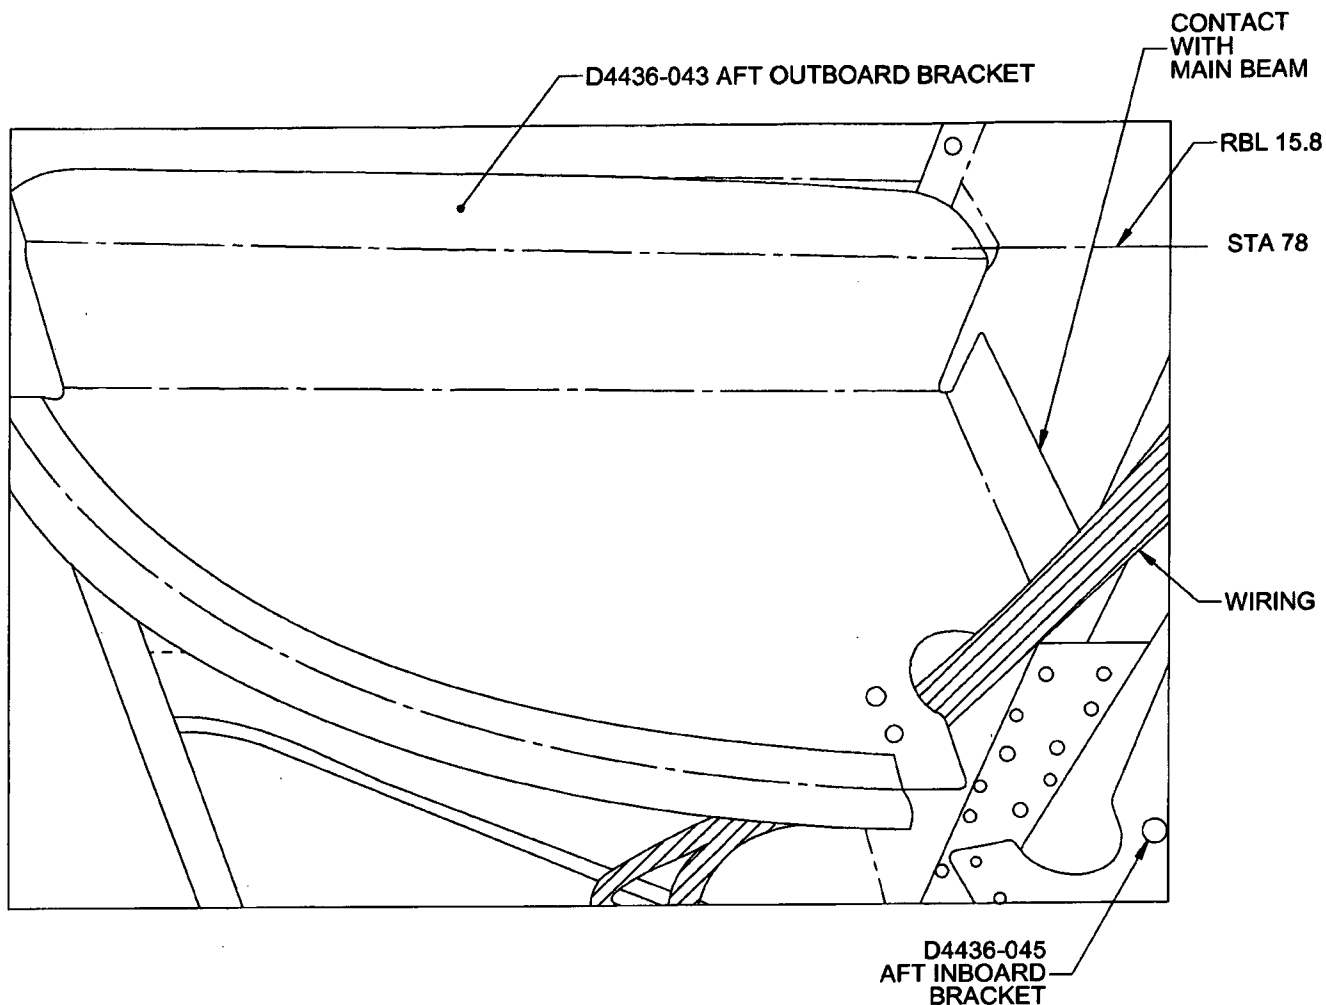


Figure 3. D4436-043 Aft Outboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	A/S		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 6 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

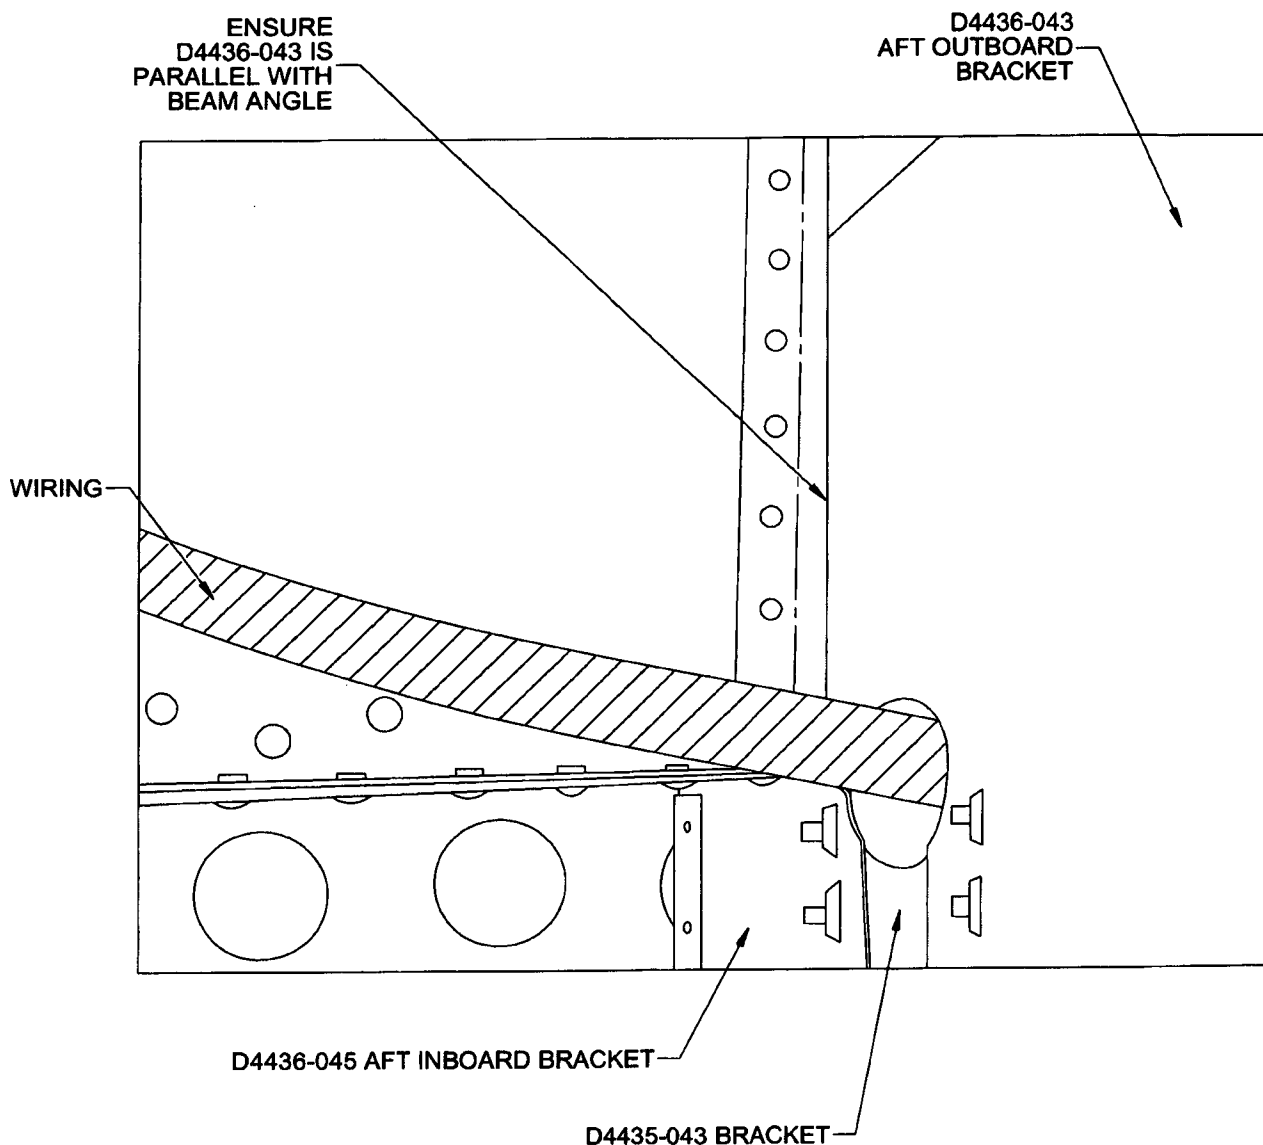


Figure 4. D4436-043 & D4435-043 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 7 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

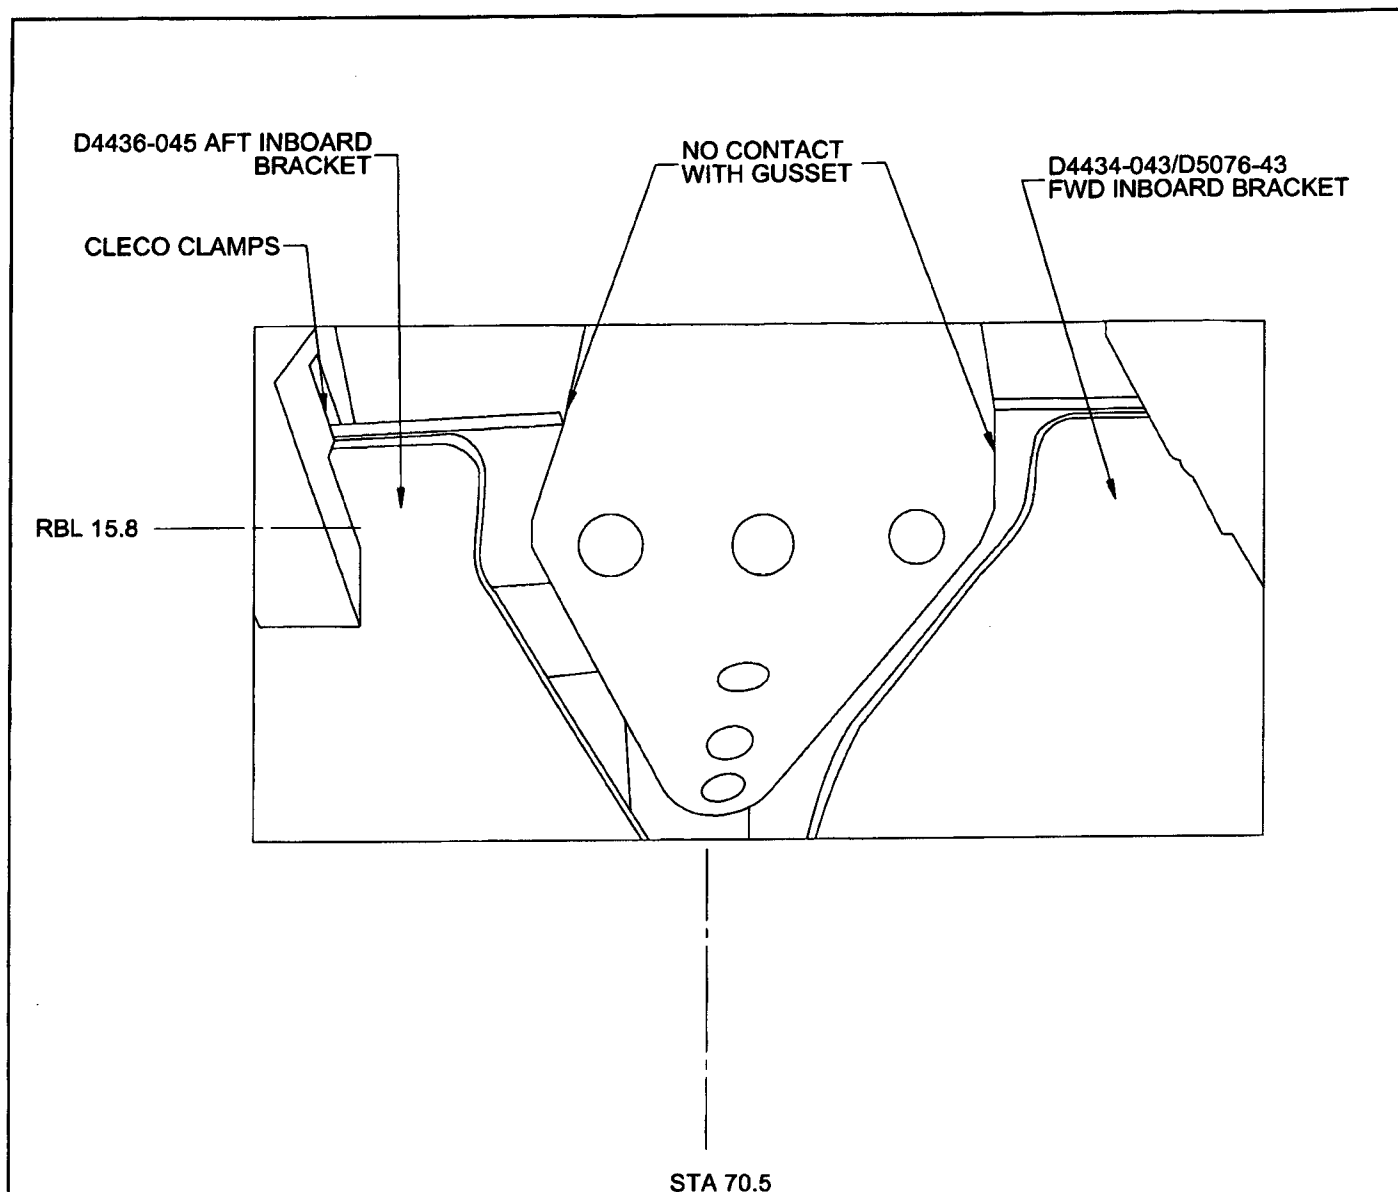


Figure 5. D4436-045 & D4434-043/D5076-043 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 8 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

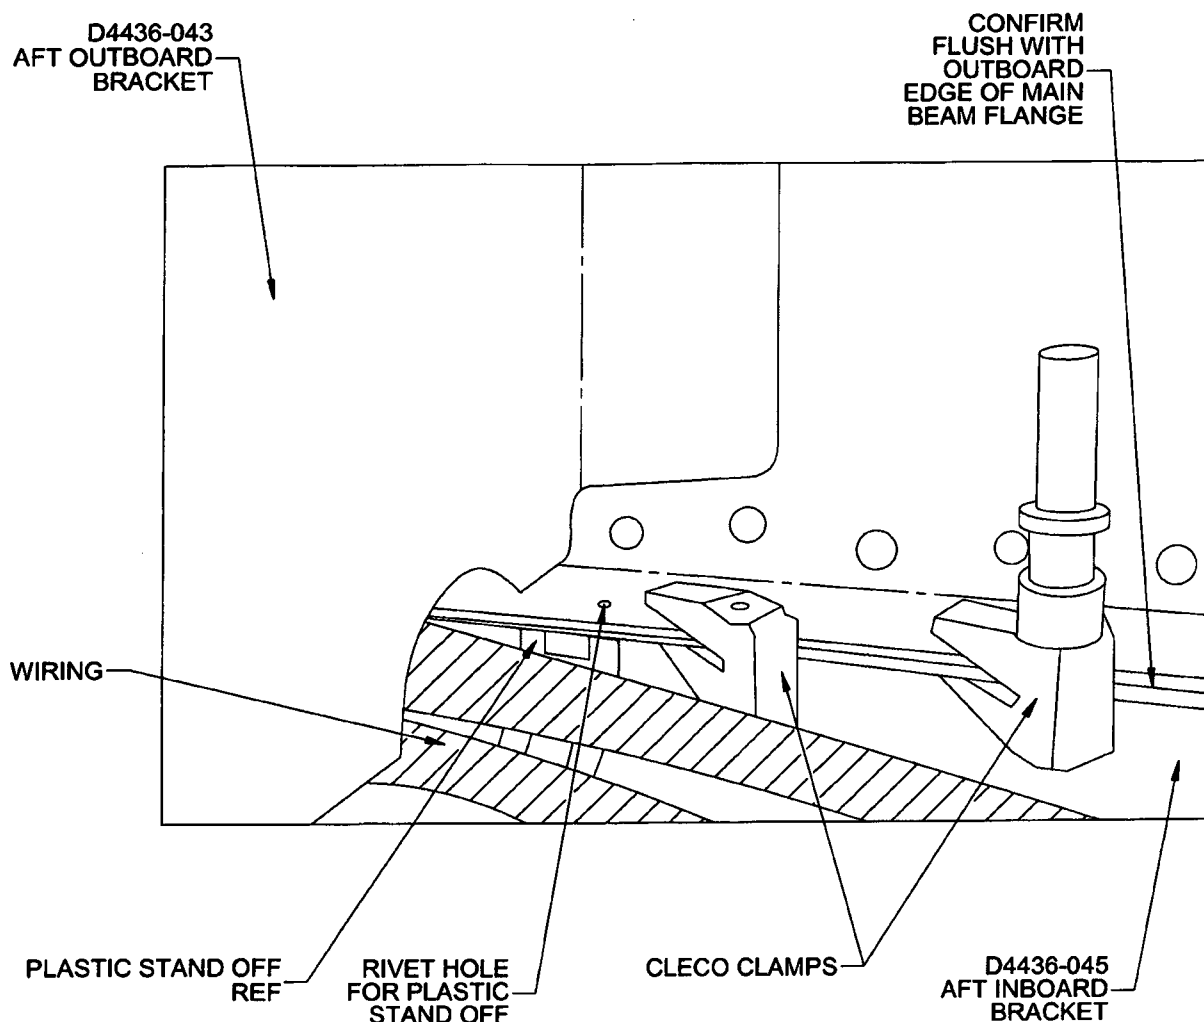


Figure 6. D4436-043 & D4436-045 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE:

15.01.12

CERT. NO.:

SH92-18

ISSUE NO.:

6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 9 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

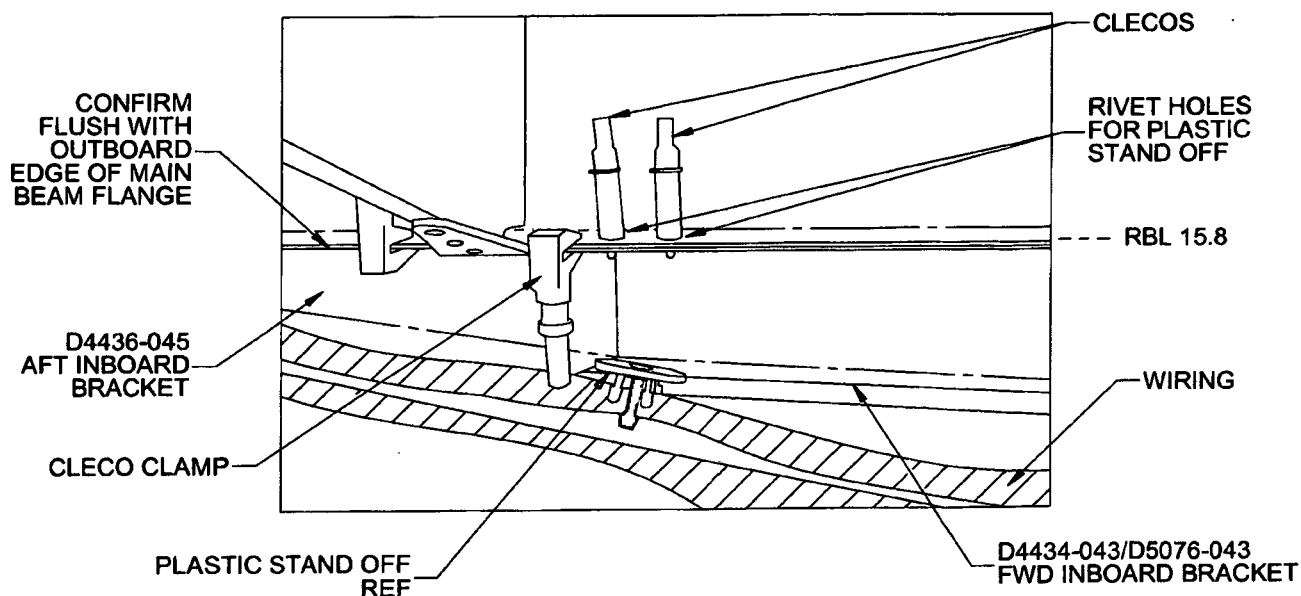


Figure 7. D4434-043/D5076-043 & D4436-045 Brackets Installation

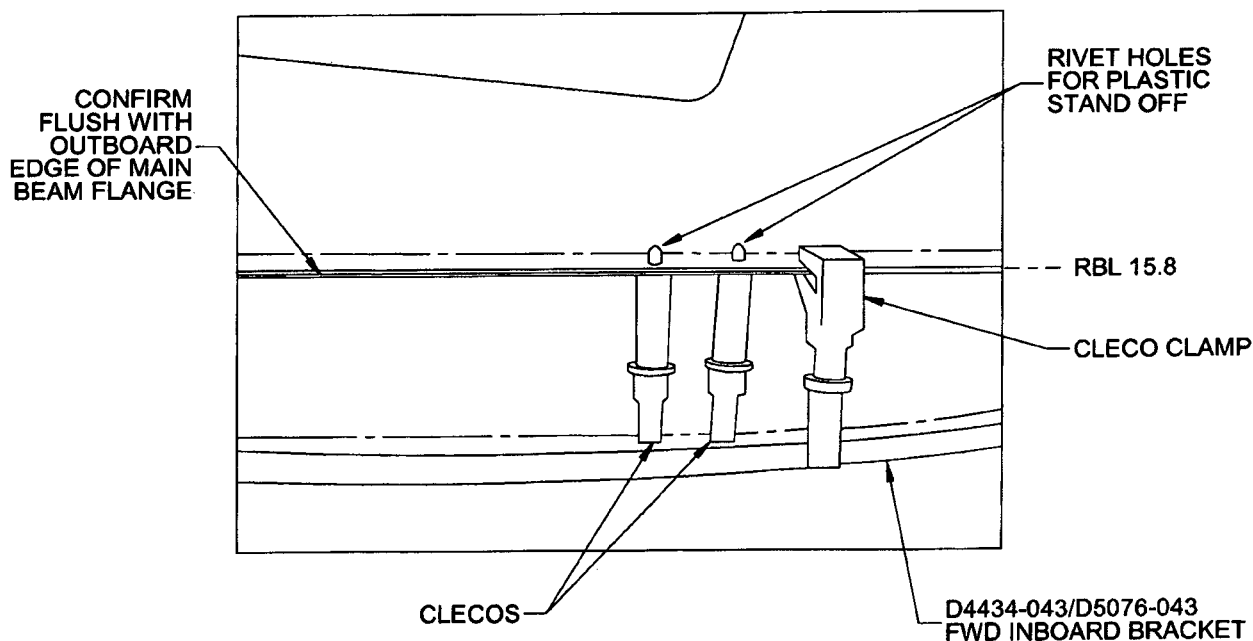


Figure 8. D4434-043/D5076-043 Fwd Inboard Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 10 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

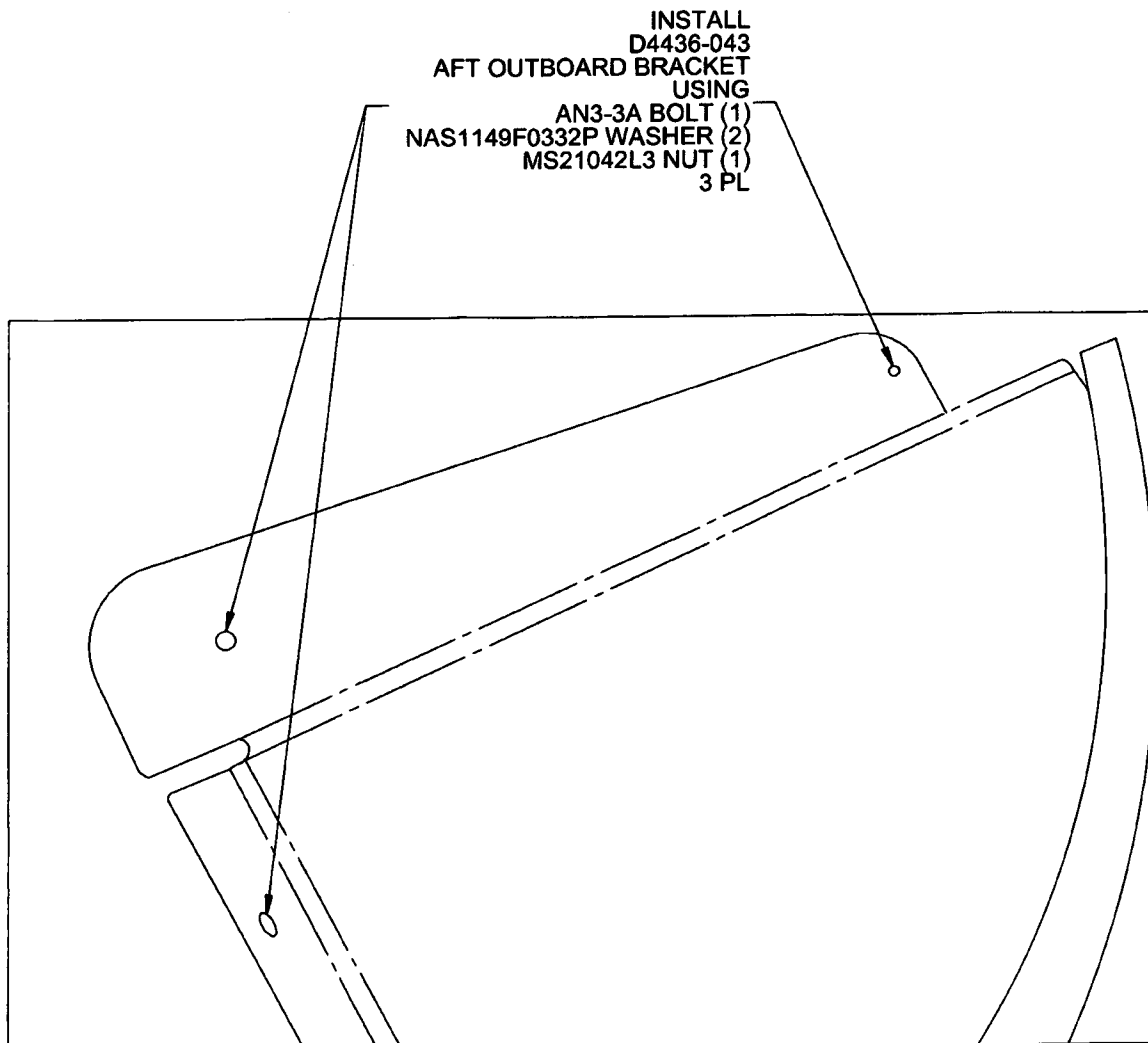


Figure 9. D4436-043 Aft Outboard Bracket Installation


CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 11 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

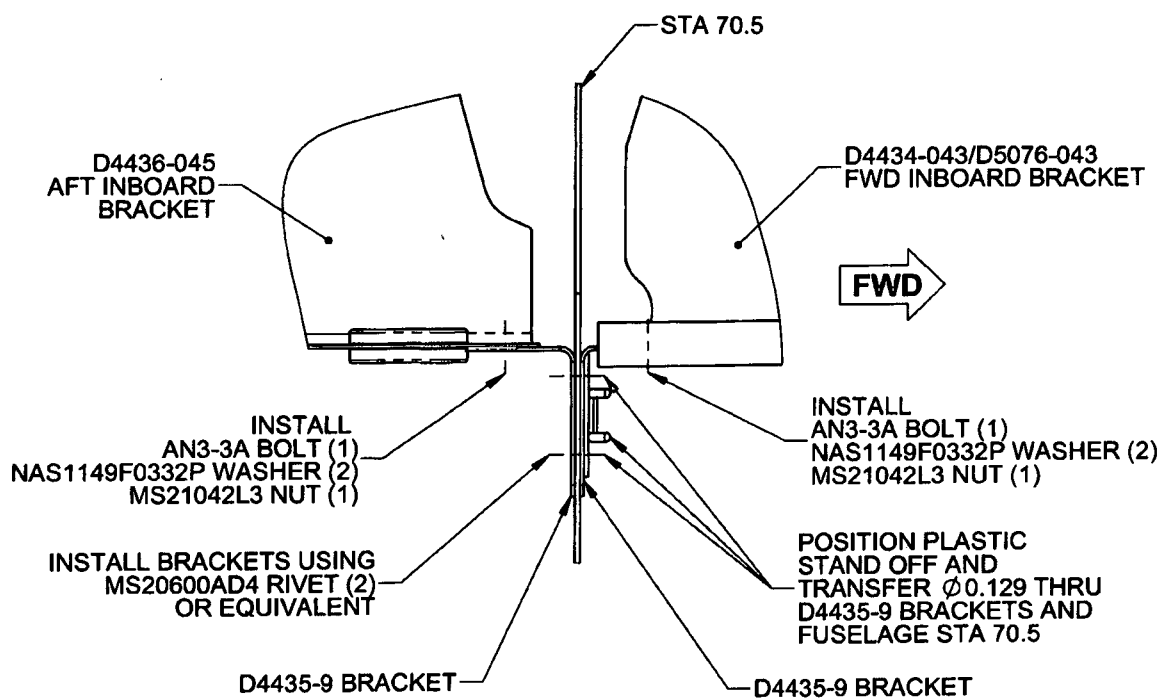

LOOKING UP AT STA 70.5

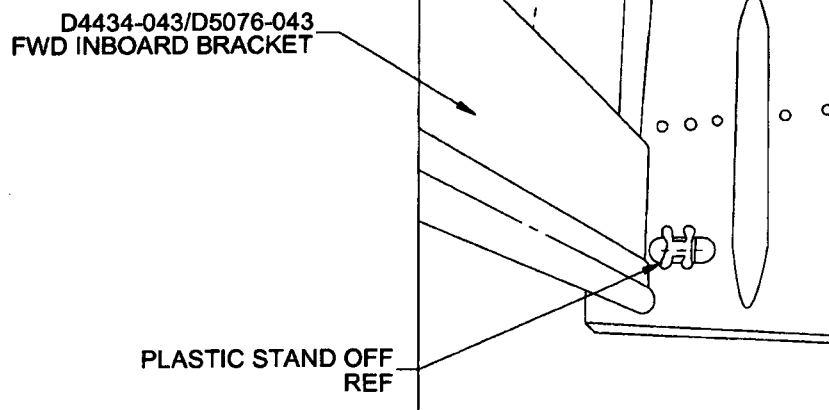


Figure 10. D4434-043/D5076-043 and D4435-9 Brackets Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 12 OF 19
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

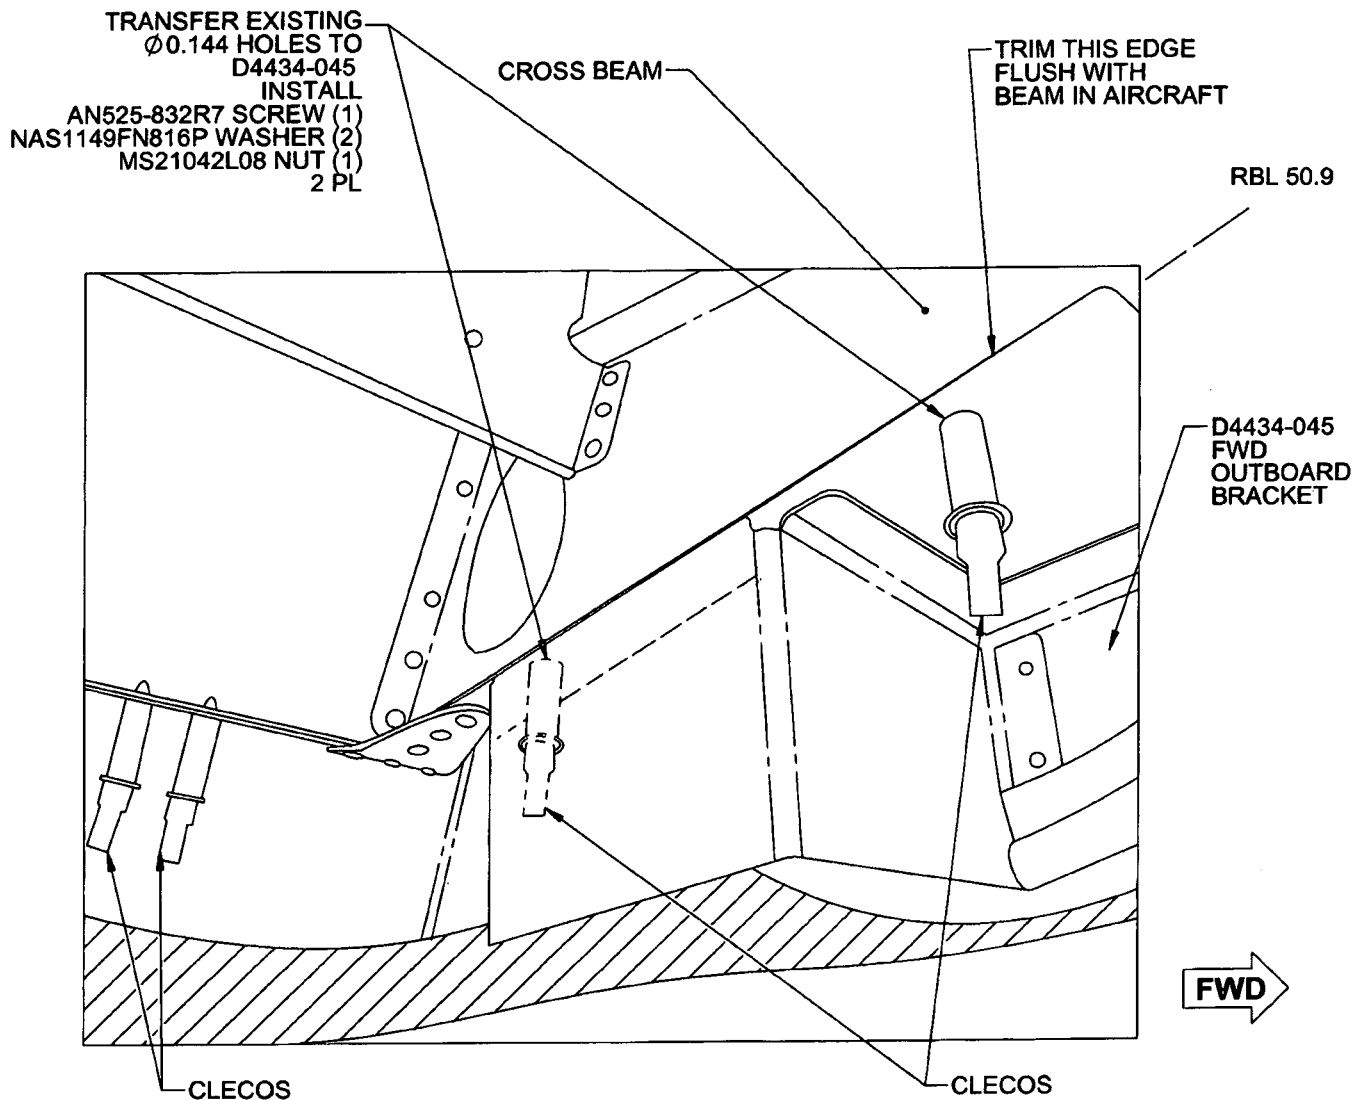


Figure 11. D4434-045 Bracket Installation

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD	
DRAWN	AJS	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 13 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

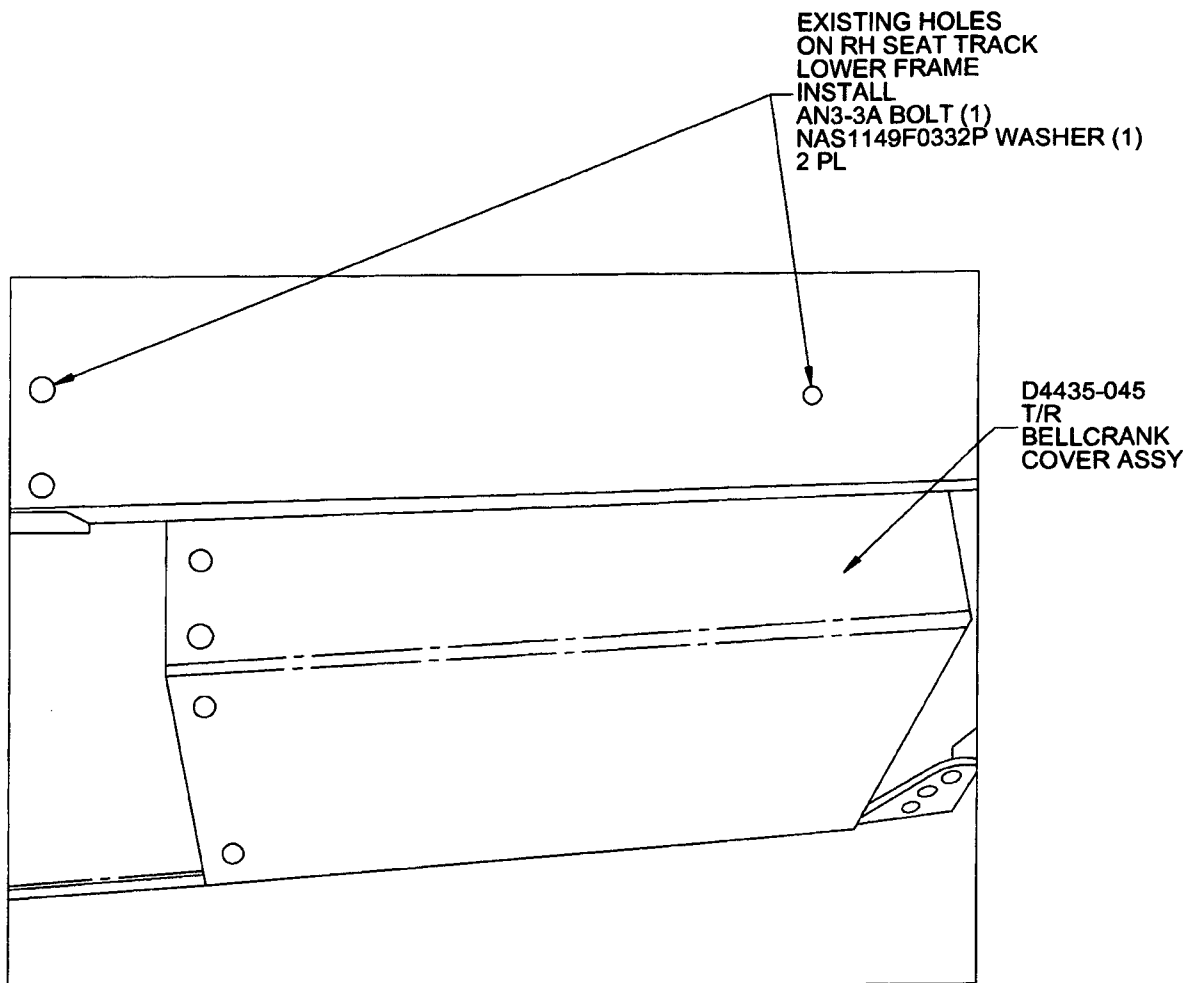



Figure 12a. D4435-045 T/R Bellcrank Cover Installation (-141)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED		DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 14 OF 19	
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

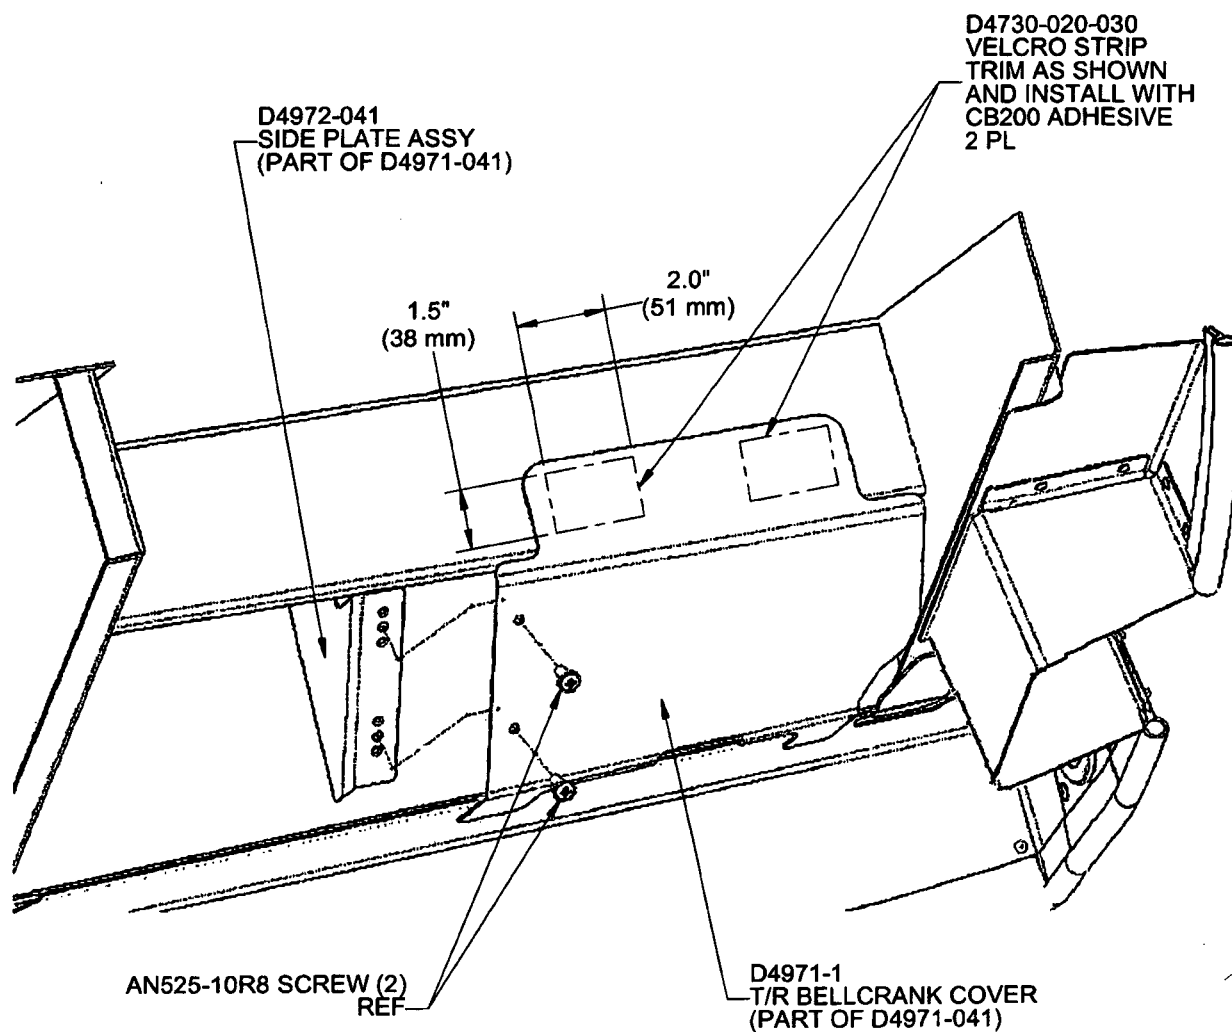


Figure 12b. D4971-041 T/R Bellcrank Cover Assy Installation (-143/-145)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 15 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

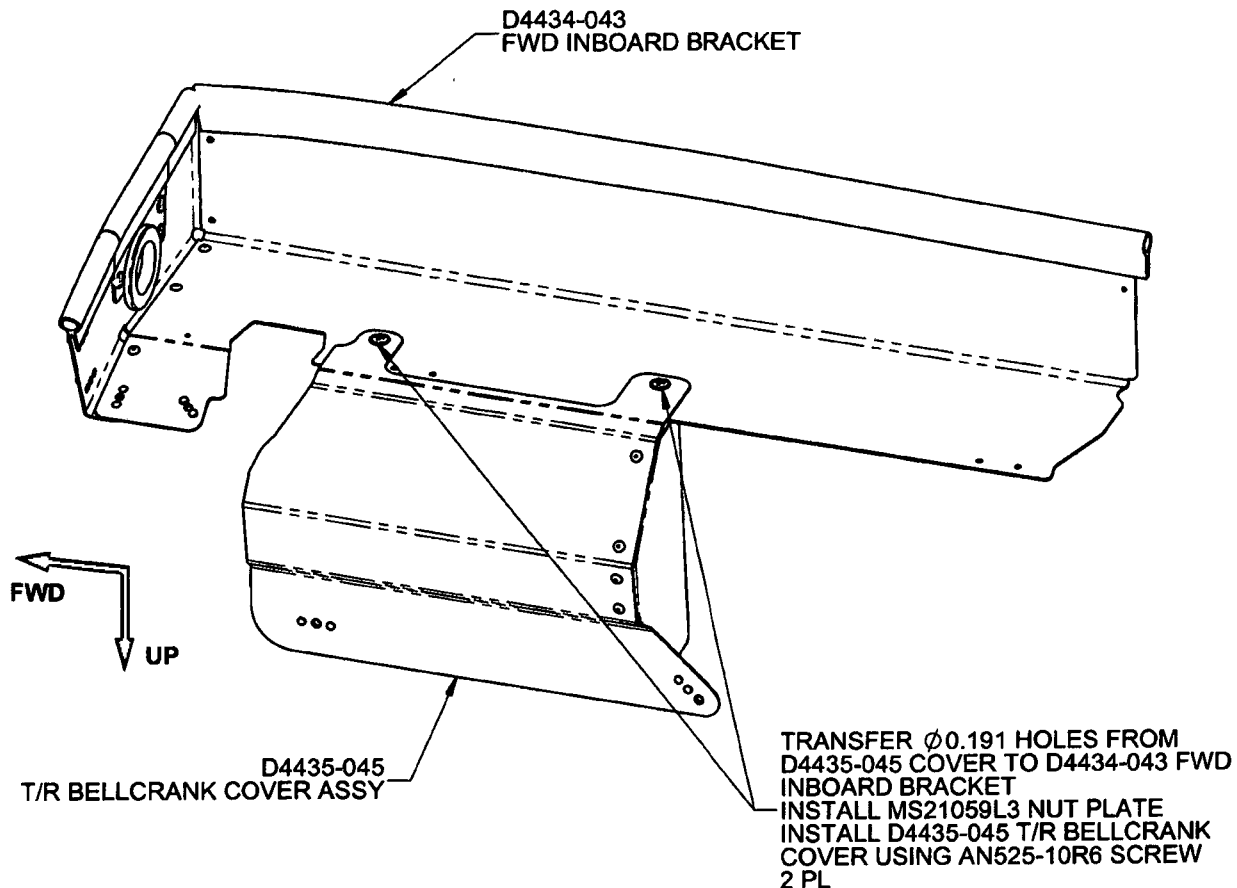


Figure 13a. D4435-045 Cover Installation (-141 ONLY)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 16 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

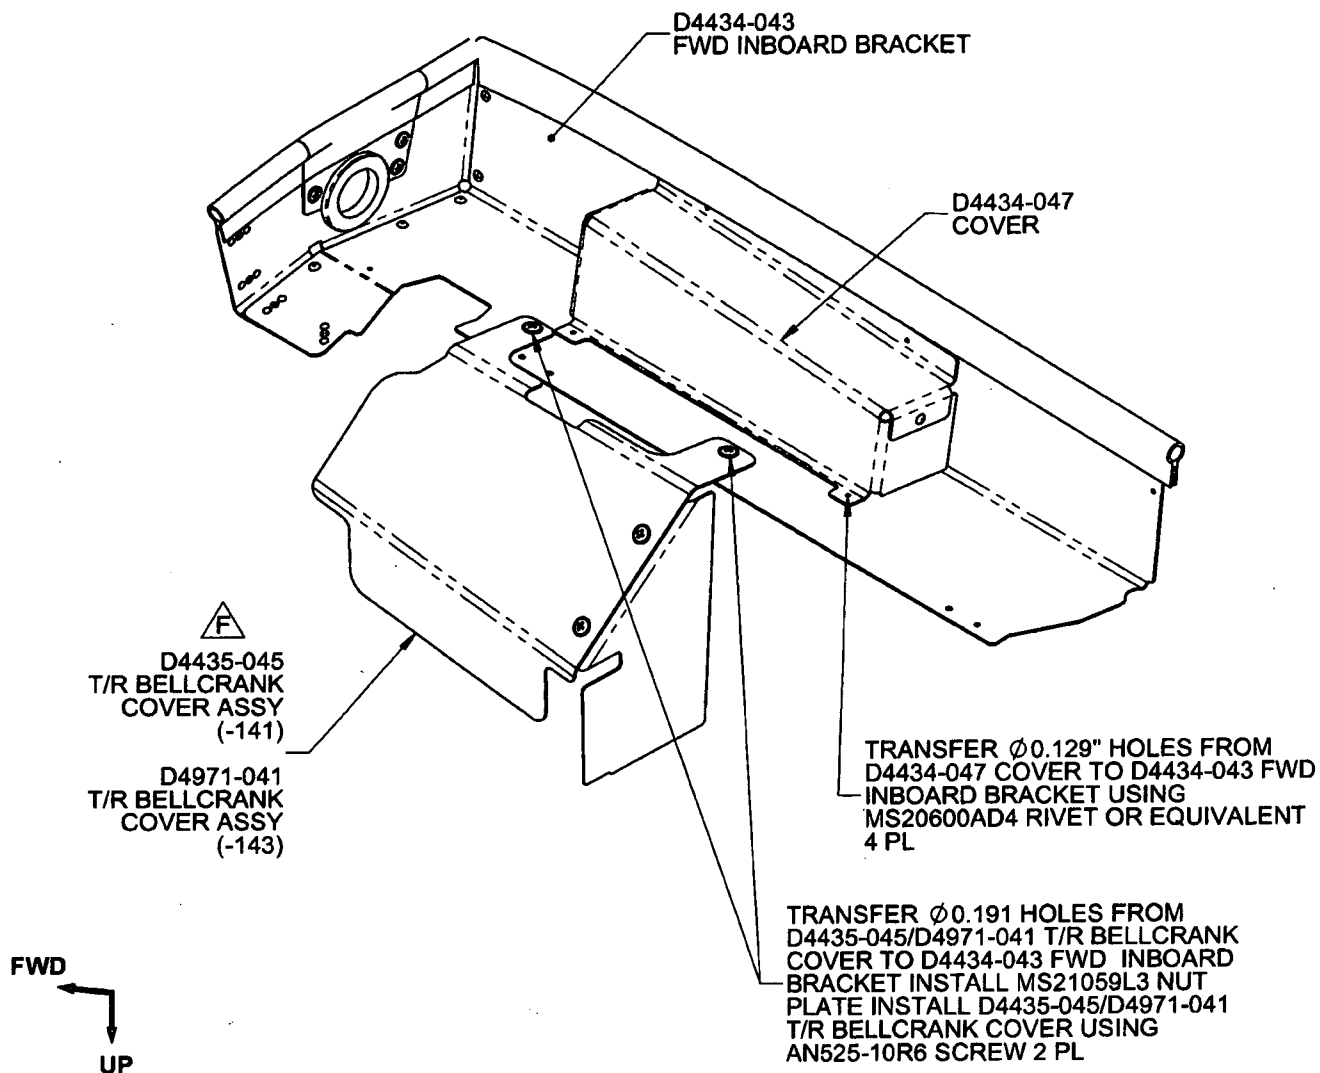


Figure 13b. D4971-041/D4435-045 & D4434-047 Cover Installation
(D4434-047 is Optional on -141)



CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 17 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

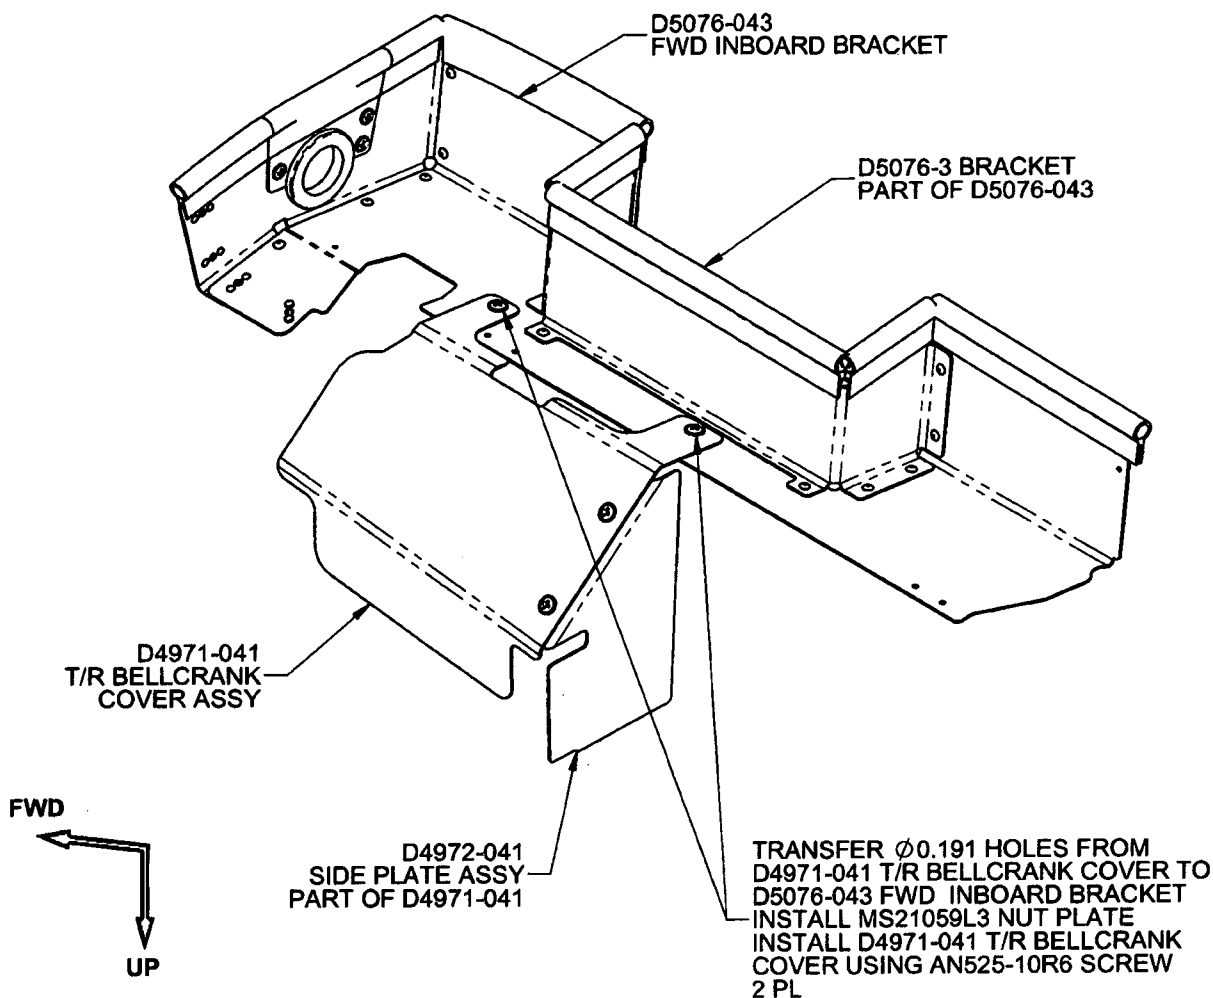


Figure 13c. D4971-041 INSTALLATION INTO D5076-043 (-145 ONLY)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 18 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL, AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

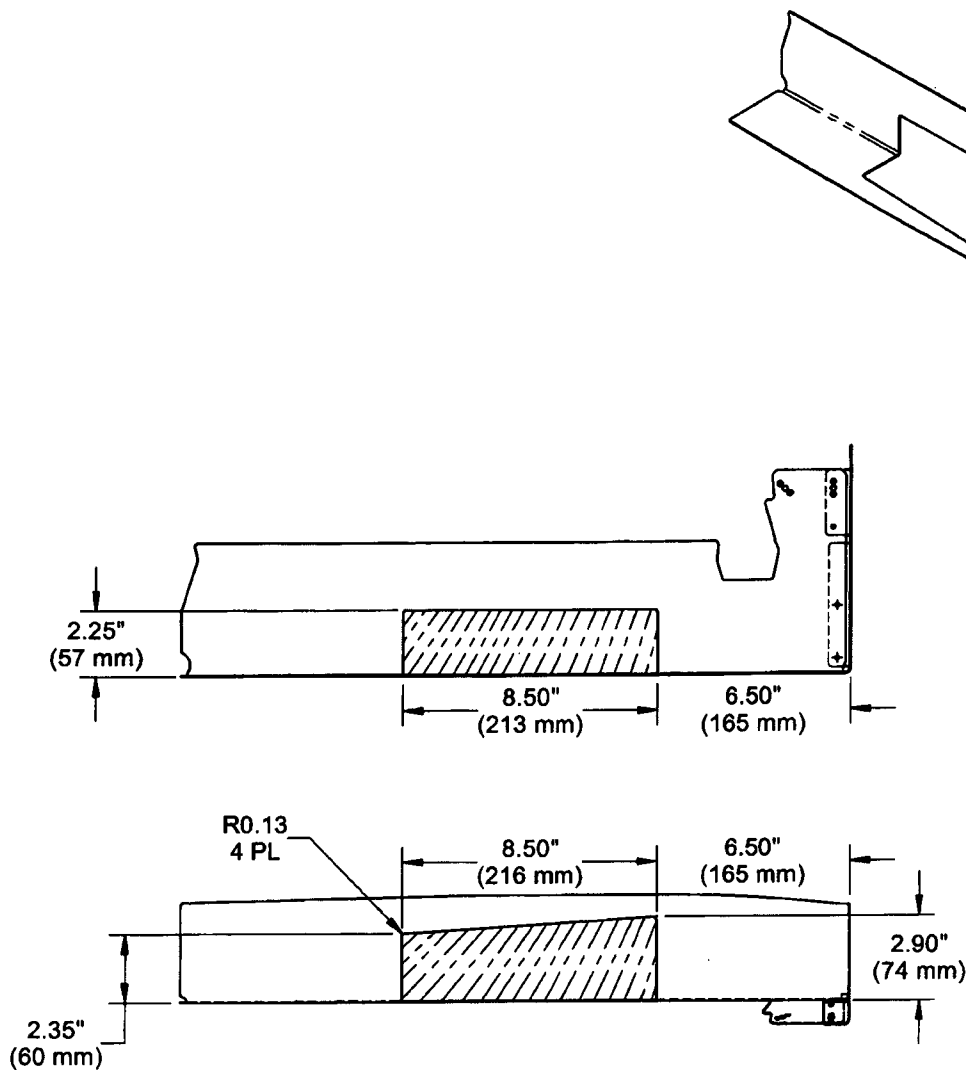


Figure 14. D4434-043 Fwd Inboard Bracket Cutout

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO. DSI 9590	REV. F
MFG. APPR.	N/A	SHEET 19 OF 19	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

REFERENCE ONLY

DAS
26
9-89

2.0 Parts List

Qty -141	Qty -143	Qty -145	Part Number	Description
X			D350-567-141	FLOOR WINDOW CLOSE-OUT KIT (REGULAR SEATS)
	X		D350-567-143	FLOOR WINDOW CLOSE-OUT KIT (ENERGY ATTENUATING SEATS)
		X	D350-567-145	FLOOR WINDOW CLOSE-OUT KIT (AS 350 B3e)
1	1	1	D3802-1-024	SEAL (24")
1	1		D4434-041	FWD BRACKET ASSEMBLY
1	1		D4434-047	COVER ASSEMBLY
1			D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	2	2	D4435-9	BRACKET
1	1	1	D4436-041	AFT BRACKET ASSEMBLY
1	1	1	D4441-1-240	RUBBER SEAL (24")
		1	D4730-020-030	VELCRO STRIP
	1	1	D4971-041	T/R BELLCRANK COVER ASSEMBLY
		1	D5076-041	FWD BRACKET ASSEMBLY
7	5	5	AN3-3A	BOLT
2	2	2	AN525-10R6	SCREW
2	2	2	AN525-832R7	SCREW
		1	CB 200	3.5g ACRYLIC ADHESIVE
7	7	7	MS21042L06	NUT (OR MS21042-06)
2	2	2	MS21042L08	NUT (OR MS21042-08)
5	5	5	MS21042L3	NUT (OR MS21042-3)
2	2	2	MS21059L3	NUTPLATE
7	7	7	MS35206-229	SCREW
12	10	10	NAS1149F0332P	WASHER (AN960-10L)
14	14	14	NAS1149FN616P	WASHER (OR AN960-6L)
2	2	2	NAS1149FN816P	WASHER (OR AN960-8L)

F

3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141/-143/-145 Kits.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D350-567-141/-143/-145	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kG	1.66 m	2.94 m-kG

4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141/-143/-145 Close-out Kits. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
 - D350-567-115 - OK to remove D3295-041
 - D350-567-031 - OK to remove D3212-1
 - D350-567-011 - OK to remove D2214
 - D350-567-021 - OK to remove D2951
- It is acceptable to drill/trim the D350-567-141/-143/-145 Close-out Kits as required to improve fit.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 15.01.12
CERT. NO.: SH92-18
ISSUE NO.: 6

DESIGN	RF	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 19
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	15.01.12	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	